



Connection Terminals:

Position 1: 1-8, 4-5

Position 2: 1-2, 5-6

Position 3: 7-8, 3-4

Key Pull: Position 1

Position 1 is Maintained,

Positions 2 and 3 are Momentary