



# GAMA Electronics, Inc.

P.O. Box 1488 Crystal Lake, IL 60039

TEL: (815) 356-9600

WEB: [www.gamainc.com](http://www.gamainc.com)

E-MAIL: [gama@gamainc.com](mailto:gama@gamainc.com)

FAX: (815) 356-9603

## KP340-DRC

This keypad is an access control and accessory for our Overhead Door Control System (RF340-DRC). The keypad is powered by an A23 12-volt battery which should last one year.

The KP340-DRC keypad requires a 4-digit code be entered to transmit the open, close, and stop commands to the selected receiver. When the 4 digit code is entered, the keypad sends a wireless command to the receiver that activates the OPEN command. Pressing the "STOP/CLOSE" button activates the STOP command first and then the CLOSE command on next button press. The CLEAR button will reset the transmitter if the incorrect code was entered. The keypad will illuminate once any button is pressed; when 4-digits are entered the keypad LEDs will turn off then back on to indicate that the access code has transmitted.

You will need to select a 4-digit code to use to activate the receiver (s) that you want to control with the keypad. Once the 4-digit code is entered on the keypad, the transmitter will transmit the OPEN command to the receiver. Make sure to enter the 4-digit code prior to programming the keypad to the receiver.

To program the keypad to the receiver, you should gather all the transmitters that you want to use to control the particular receiver because once you activate the program mode on the receiver it will erase all previous transmitter addresses that were saved. To program the transmitters, push and hold the program button on the receiver until the receiver's program LED illuminates, then release the button. Push and release the STOP/CLOSE button on the KP340-DRC keypad, the receiver's program LED will blink once. Continue to the KF340-3DC transmitter and push and release any button and the receiver LED will blink twice for the second transmitter being programmed, 3-times for the third transmitter, 4 times for the fourth transmitter, etc. After all transmitters have been programmed the receiver LED will flash rapidly and then turn off. Verify that the receiver has stored the keypad and transmitter address codes by activating the door connected to the receiver.