

## RF340-4PR-TO Wiring Diagram

\*To activate system, you must press the "A" button and then the "B" button on the transmitter. The unit will remain active until it sees no activity for three minutes.

