

815-356-9600

Isolated Output Contacts - Independent from the power source NC - Normally Closed Contact This terminal is connected to the common until the receiver is activated by the transmitter COM-Common This terminal should be connected to the AC or DC power that is being switched. RFR12V1C NO - Normally Open Contact This terminal is connected to the common GAMAINC.COM when the receiver is activated by the transmitter PROGRAM **12V DC POWER** SOURCE Long Range Antenna Bypass Wire

RFR12V1C-MB WIRING DIAGRAM