


GAMA ELECTRONICS

Note: existing wiring colors may be different than shown.

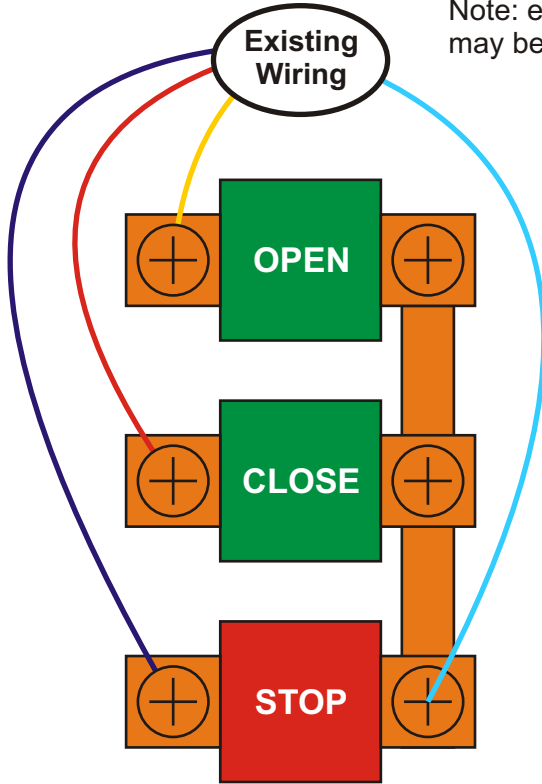

NOTE:
You must remove the existing "STOP" wire from the terminal and connect it to the orange wire using the supplied wire nut.

