


GAMA ELECTRONICS

WWW.GAMAINC.COM

LRF120VPR1L Instruction Manual

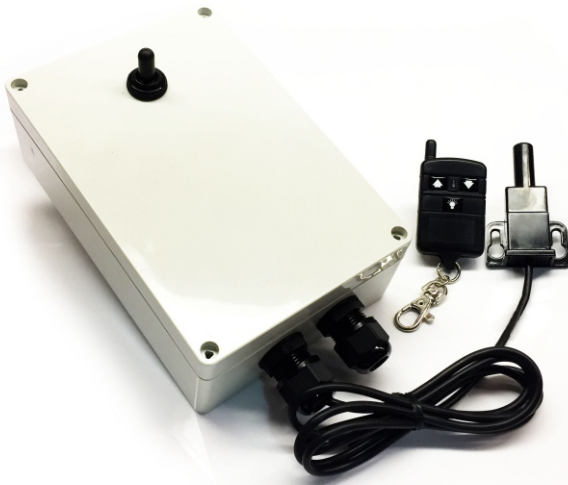

Included in this Kit:

- (1) LRF120VPR1L Receiver
- (1) 3-Button Transmitter with Light
- (1) Long Range Antenna LRA340 **See PAGE 3 FOR SETUP**

Available accessories:

- Wireless Outdoor Keypad KP340-DRC
- 3-Button Waterproof Transmitter KF340-3L-WP
- Rechargeable Transmitter GKF-WPTX-3L
- 3-Button Keyfob Transmitter KF340-3

The LRF120VPR1L is an RF receiver operating at a fixed frequency of 340 MHZ. It operates from 120VAC and provides one polarity reversing output for use with a four/six lead AC motor. The receiver is not designed to operate with any existing hand or drum switch. The receiver is equipped with a manual toggle switch. An additional latching output is available for connecting to a 120VAC light. Up to thirty, three-button keyfob transmitters can be used to activate the receiver's relay. The receiver has a terminal block for connecting the power and relay contacts. Each transmitter has a unique address that is transmitted when a button is pressed. A "program" button is provided on the receiver to program the transmitter(s) address into the receiver's memory. An LED on the receiver indicates the receiver's programming status and illuminates when the receiver is energized. The receiver is encased in a waterproof enclosure. The operating range is approximately 500 ft. Operating temperature range is 0°F to 160°F.

Polarity Reversing Output: The transmitter has two buttons assigned to the motor output. The up (^) button runs the motor in one direction and the down (v) button runs the motor in the opposite direction. The reversing function accomplished by reversing the phase on two of the four motor connections at the receiver output.

Manual Switch: The receiver is equipped with a manual switch. This switch replaces any hand or drum switch previously connected to the motor.

Light Output: The light output is activated using the "B" button on the transmitter. Press button "B" once to latch this output on. Press button "B" again to turn the light output off. The light function is active at all times and does not require the power up sequence to be performed.

Maximum Ratings: Power for the receiver can be in the range of 100VAC to 132VAC. The relay contacts are rated at 20 Amps.

Programming Instructions


Each transmitter has its own unique internal address along with the data as to which button is pressed and transmitted. The receiver needs to be programmed to respond only to the specific transmitter it is intended to operate with. The following steps configure the receiver to operate with a particular transmitter. Up to 30 transmitters can be programmed to one receiver. Please read the entire programming procedure before starting. When the receiver enters program mode, all previous transmitter addresses that were programmed will be erased from the receiver's memory.

1. Locate the pushbutton labeled "PROGRAM" on the receiver. Press and hold this button until the red LED next to the program button illuminates (approximately 3 seconds). The receiver is now in the transmitter program mode. Release the button. At this point all previously programmed transmitter addresses are erased from the receiver's memory.
2. To configure the receiver for a latching output, go to Step 4.
3. To configure the receiver for momentary output, press and release the UP button on the transmitter and verify that the red program LED extinguishes and then illuminates (blinks once). Proceed to Step 5.
4. To configure the receiver for latching output, press and release the DOWN button on the transmitter and verify that the red program LED extinguishes and illuminates (blinks once).
5. Repeat previous step for additional transmitters that will operate with this particular receiver. The red LED on the receiver will extinguish and illuminate (blink) once each transmitter being programmed. The receiver will flash the LED rapidly to transmitters that have already been programmed. The last transmitter that is programmed determines the receiver's relay operating mode (momentary or latching).
6. The receiver will return to normal mode if no transmitter buttons are pressed for 5-seconds. The red LED on the receiver will blink rapidly, then extinguish. The receiver is now in the normal mode of operation. This completes the programming instructions. The receiver will retain all of its programming even when power is removed.

To erase the receivers memory:

****WARNING: THIS WILL RESTORE THE CONTROL TO THE ORIGINAL FACTORY SETTINGS AND ALL REMOTES WILL NEED TO BE REPROGRAMMED****

1. Press and hold the CLOSE switch until the LED at the top left of the OPEN switch illuminates.
2. Release the CLOSE switch and immediately press and hold the CLOSE switch a second time. The LED will start blinking and then blink very rapidly. Once the LED begins blinking rapidly, release the CLOSE switch. The door switch/receiver memory is now clear.

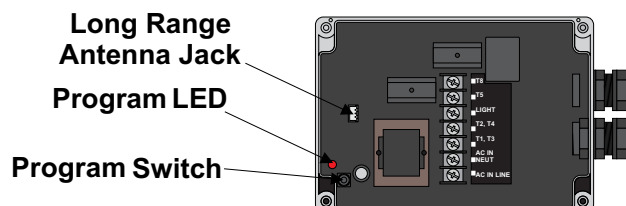


Wiring Instructions


Prior to this, verify that there is no power at any of the motor terminals.

1. Disconnect or turn off the circuit breaker to remove power (if a hand or drum switch is connected to the motor it will need to be disconnected). Takes notes before disconnecting the switch in the unlikely event it will need to be reconnected.
2. See motor connections using the tables on pages 4 and 5 for terminal connections specific to the motor.
3. 120VAC power is connected to the line and neutral terminal of the receiver.

NOTE: After completing the installation, if the motor goes the wrong direction, simply swap the wires connected to T5 and T8 on the receiver. The motor will now rotate in the correct direction. The 120VAC light connects between “common” and “light” terminals on the receiver.

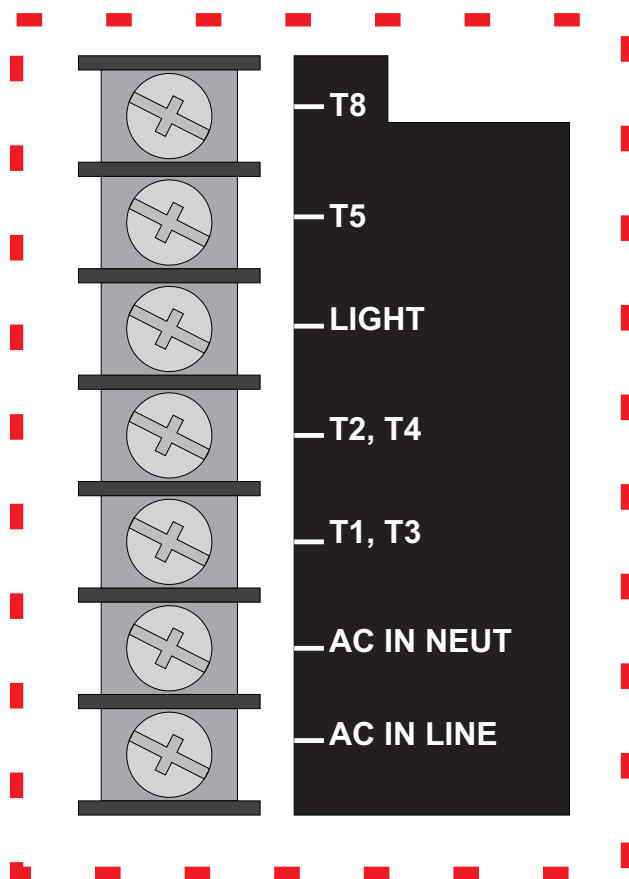

Schematic

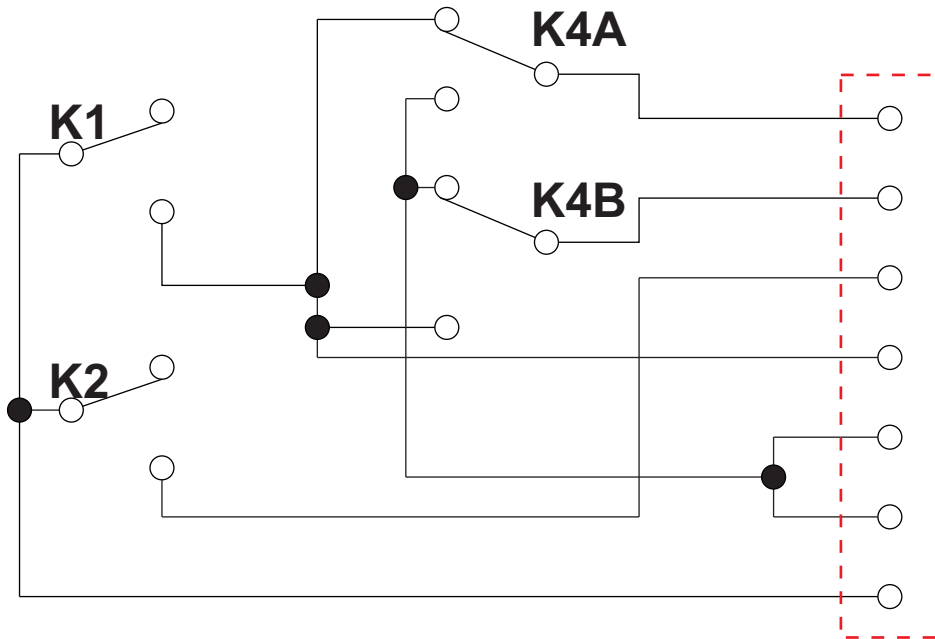

Relays shown in off position

Truth Table

K1 = Up or Down
K4 = Up
K2 = Light (Latch On/Latch Off)

T8

T5

LIGHT

T2, T4

T1, T3

AC IN NEUT

AC IN LINE

120VAC IN

Troubleshooting

All remote-control systems shipped by GAMA Electronics are 100% functionally tested just prior to shipment.

If your RF remote control system does not work out of the box, stops working or functions intermittently please take the following steps to resolve common issues. Please note that you must be 2-3 feet away from the receiver when operating the remote control. Operating within 2-3 feet may result in no operation or intermittent operation.

1. Replace the A23 12V Battery in the transmitter

- The remote control can activate during shipping and drain the battery that is installed in the control. We send a replacement battery with the system if this occurs.

2. Check the voltage supply at the receiver

- The receiver is designed to function at 100-132VAC. Voltage on the (+) and (-) terminals on the control should be within this range.

3. Reprogram the remote control

- If the system is non-functional try to reprogram the remote control. The program may not have taken during the programming process or the program button may have been pressed. If the program button is pressed the memory of the remote controls programmed to the receiver are erased.

4. Listen and look for functionality on the receiver.

- The LED that is used for programming the system will illuminate when the receiver is activated. You will also hear a “click” when the internal relays engage. If you can see the LED illuminate and you hear the relay “click” the issue is most likely in the wiring or device being controlled.

5. Add a long-range antenna

- If the receiver is in an area that is averse to the reception of an RF signal, such as near a motor or in a metal casing, a long-range antenna may solve the issue. Connect the antenna per the instructions on page 3 and mount the antenna in an exposed area away from any motor.

GAMA ELECTRONICS

WWW.GAMAINC.COM

LRF120VPR1L Instruction Manual

| Motor Name | Figure |
|---|---------------|
| STANDARD MOTOR WITH "T" NUMBERS | See Figure 1 |
| STANDARD MOTOR WITH COLORED WIRE | See Figure 2 |
| A.O Smith with L1, L2 Terminals & Colored Wire | See Figure 3 |
| A.O. Smith C426 Motors with Terminals & Colored Wires | See Figure 6 |
| A.O. Smith C526 Motors with Terminals & Colored Wire | See Figure 6 |
| A.O. Smith C926 Motor with Colored Wire | See Figure 7 |
| A.O. Smith Motor 7-181021-20 | See Figure 19 |
| A.O. Smith Motor C56A31B17 | See Figure 20 |
| A.O. Smith Motor C56B05B17 | See Figure 20 |
| A.O. Smith Motor | See Figure 11 |
| Ace Motors with Terminals | See Figure 8 |
| Baldor Motor CPI2000 | See Figure 16 |
| Baldor Motor Type LC, DV | See Figure 17 |
| Baldor Motors with L1, L2 Terminals & Colored Wire | See Figure 3 |
| Century AC Motors with Colored Wire | See Figure 7 |
| Century AC Motors with Terminals & Colored Wire | See Figure 6 |
| Century Motors with Terminals | See Figure 4 |
| Dayton Motor 6K719L (Thermal Protection) | See Figure 22 |
| Eastbay Motors with Terminals | See Figure 5 |
| Elite Pointed Motors | See Figure 12 |
| Emerson Motors with Terminals | See Figure 10 |
| GE Motors with Terminals & Colored Wire | See Figure 9 |
| Leeson Motor M6K17F61A | See Figure 21 |
| Leeson Motors with Terminals | See Figure 8 |
| Leeson Type Motor (with Protector) M6C17FB10 | See Figure 18 |
| Magnetek Motor 8-181021-20 | See Figure 23 |
| Magnetek Motors with Terminals | See Figure 4 |
| Marathon Motor 5KC42JN0214 (3/4 HP) | See Figure 15 |
| Marathon Motor 5KC49PN0216 (1 HP) | See Figure 15 |
| Marathon Motor 5KC49TN0063Y | See Figure 24 |
| Marathon Motor 5KCP35KNB057AS | See Figure 24 |
| Marathon Motor 7PJ56C17F5945 | See Figure 21 |
| Marathon Motors with Terminals & Colored Wire | See Figure 9 |
| Powerfist Motor 8703050 | See Figure 18 |
| Regal Beloit Motor | See Figure 11 |
| Regal Beloit Motor 52A105379AA | See Figure 13 |
| Regal Beloit Motor C56AD36B17 | See Figure 14 |
| Regal Beloit Motor with Type K Protector | See Figure 18 |
| US Motors C63BXFKJ-5564 | See Figure 26 |
| WEG Motor with Protection | See Figure 25 |

FIGURE 1



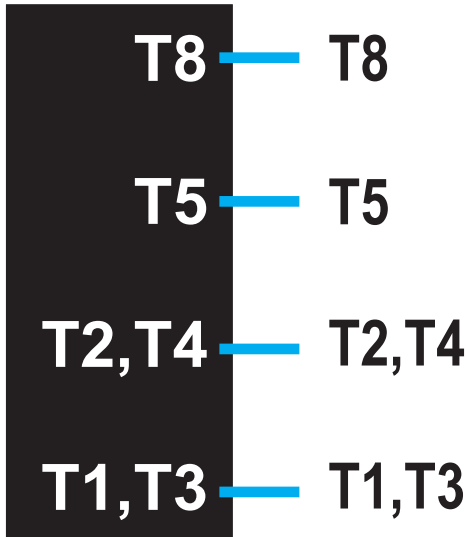


FIGURE 2

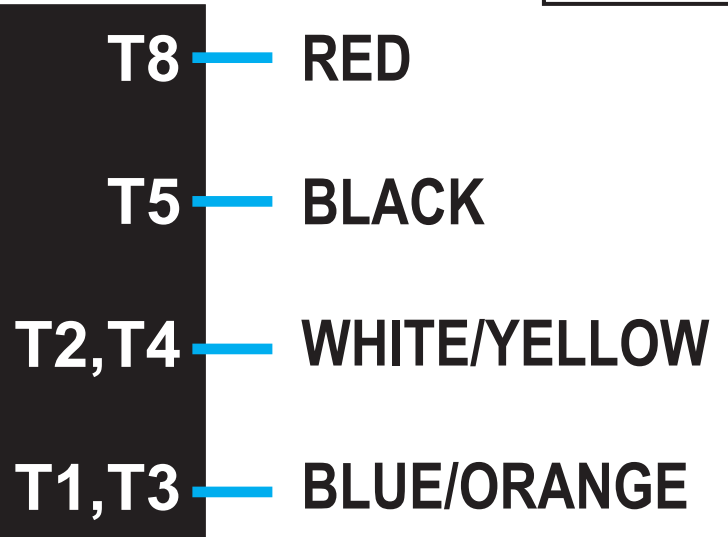

*USE WIRE NUTS TO CONNECT
THE RECEIVER TO MOTOR WIRES

FIGURE 3

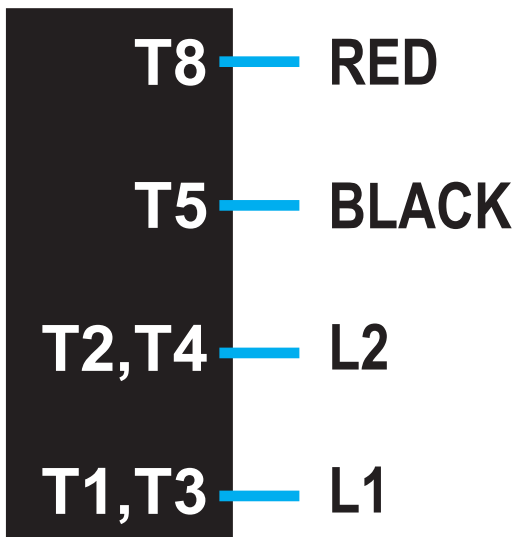

*USE WIRE NUTS TO CONNECT
THE RECEIVER TO MOTOR WIRES

FIGURE 4

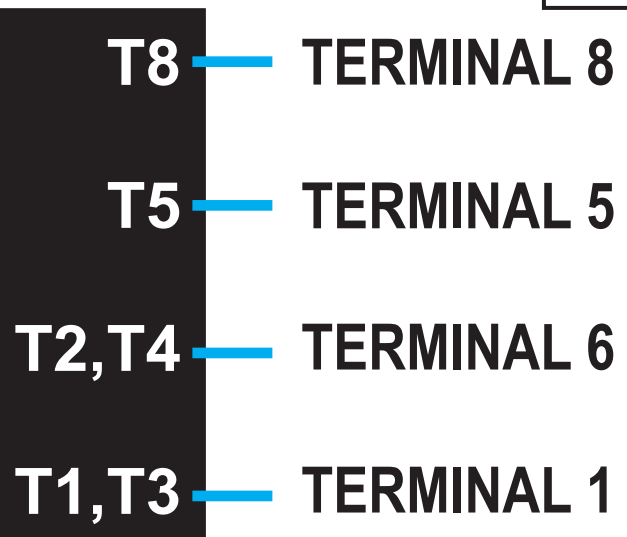


FIGURE 5

T8 — TERMINAL B

T5 — TERMINAL A

T2,T4 — TERMINAL D

T1,T3 — TERMINAL E

FIGURE 6

T8 — Motor Red *Use blue wire nut
to connect the receiver to motor wire

T5 — TERMINAL 5

T2,T4 — TERMINAL 6

T1,T3 — TERMINAL 1

*MOTOR WIRES BROWN & ORANGE
MUST BE CONNECTED TO TERMINAL 3

FIGURE 7

T8 — RED

T5 — YELLOW

T2,T4 — BLUE

T1,T3 — BLACK

FIGURE 8

T8 — TERMINAL 3

T5 — TERMINAL 5

T2,T4 — TERMINAL 2

T1,T3 — TERMINAL 1

FIGURE 9

T8 — TERMINAL 2
T5 — MOTOR RED
T2,T4 — MOTOR YELLOW
& WHITE
T1,T3 — TERMINAL 1

*USE BLUE WIRE NUTS TO CONNECT THE
RECEIVER TO MOTOR WIRES

FIGURE 10

T8 — TERMINAL 2
T5 — TERMINAL 4
T2,T4 — TERMINAL 1
T1,T3 — TERMINAL 3

FIGURE 11

T8 — RED
T5 — ORANGE
T2,T4 — WHITE
T1,T3 — BLACK

FIGURE 12

T8 — RED
T5 — BLACK
T2,T4 — WHITE
T1,T3 — ORANGE

FIGURE 13

| | | |
|-------|---|-------|
| T8 | — | RED |
| T5 | — | BLACK |
| T2,T4 | — | 2 |
| T1,T3 | — | 1 |

FIGURE 14

| | | |
|-------|---|------------|
| T8 | — | RED |
| T5 | — | BLACK |
| T2,T4 | — | L1 (BLUE) |
| T1,T3 | — | L2 (WHITE) |

FIGURE 15

| | | |
|-------|---|------------|
| T8 | — | RED |
| T5 | — | (2) BLACK |
| T2,T4 | — | (1) ORANGE |
| T1,T3 | — | WHITE |

FIGURE 16

| | | |
|-------|---|----------------------|
| T8 | — | 8 |
| T5 | — | 5 |
| T2,T4 | — | 1 |
| T1,T3 | — | NO CONNECTION |

*J-NEUTRAL IN RECEIVER

*4-NEUTRAL IN FROM AC POWER SOURCE

*LINE OF RECEIVER TO LINE OF
AC POWER SOURCE

FIGURE 17

| | | |
|-------|---|------------------|
| T8 | — | 8 RED |
| T5 | — | 5 BLACK |
| T2,T4 | — | 2 WHITE/4 YELLOW |
| T1,T3 | — | 1 BLUE/3 ORANGE |

FIGURE 18

| | | |
|-------|---|----------------------|
| T8 | — | T8 |
| T5 | — | T5 |
| T2,T4 | — | T2, T4 |
| T1,T3 | — | NO CONNECTION |

*P2, T3-NEUTRAL FROM AC INPUT

*P1-NEUTRAL FROM AC INPUT

FIGURE 19

| | | |
|-------|---|--------------|
| T8 | — | 5 |
| T5 | — | RED 2 |
| T2,T4 | — | YELLOW/WHITE |
| T1,T3 | — | BLUE/ORANGE |

*BLACK 4- NO CONNECTION

FIGURE 20


| | | |
|-------|---|-------|
| T8 | — | RED |
| T5 | — | BLACK |
| T2,T4 | — | L2 |
| T1,T3 | — | L1 |

FIGURE 21



*ORANGE/P2-NEUTRAL ON RECEIVER
*P1-NEUTRAL AC INPUT

FIGURE 22

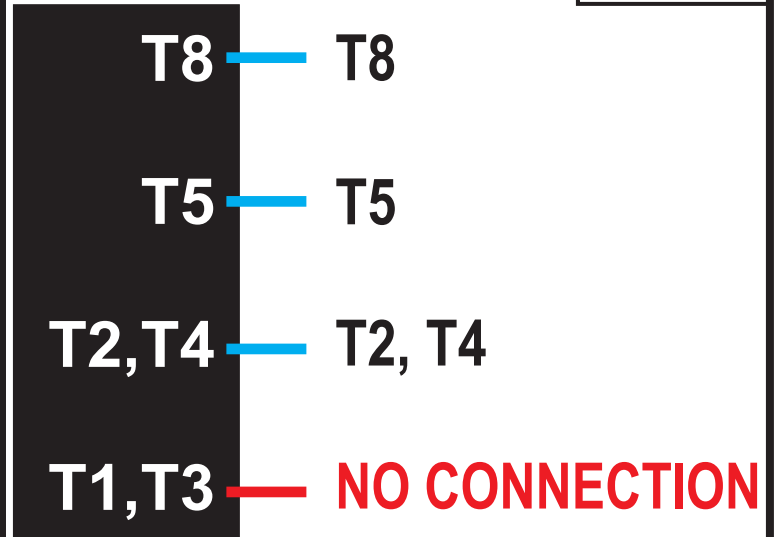

*P2, T3-NEUTRAL
*P1-NEUTRAL AC INPUT

FIGURE 23


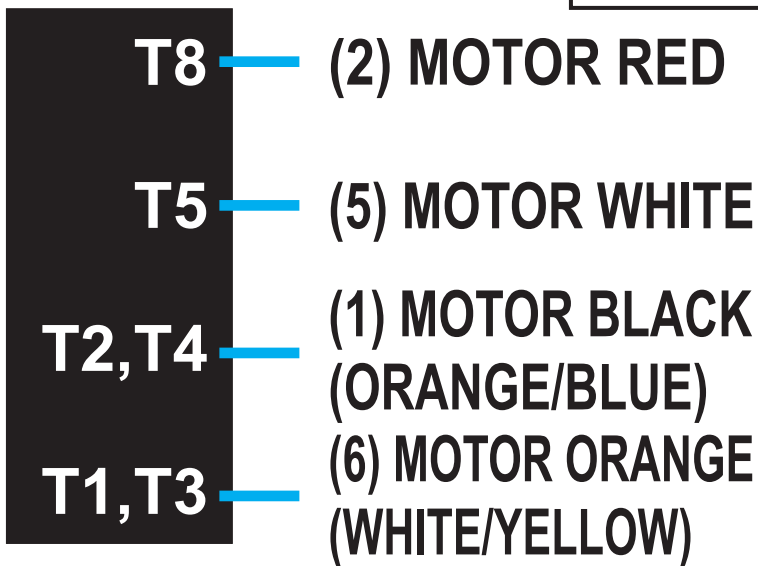


FIGURE 24

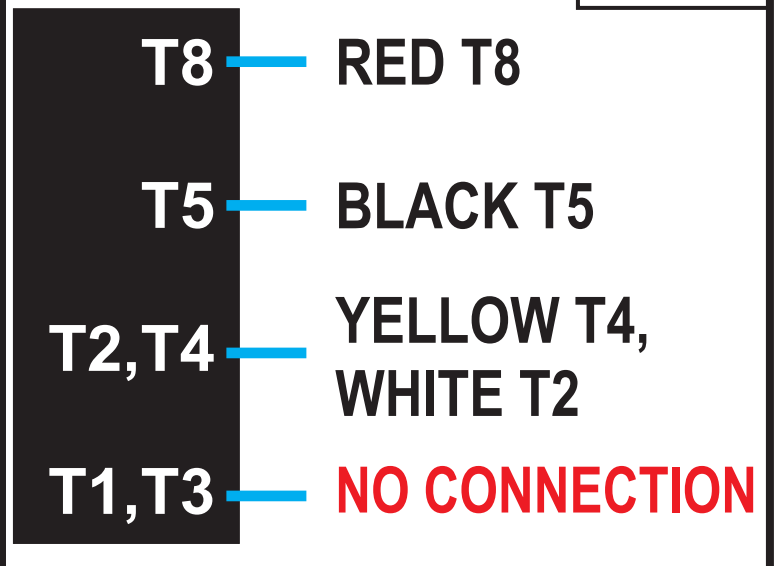

*BROWN P2 ORANGE T3-NEUTRAL
*PURPLE P1-AC INPUT NEUTRAL

FIGURE 25

T8 — RED (8)
T5 — BLACK (5)
T2,T4 — BLUE (1)
 ORANGE (3)
T1,T3 — NO CONNECTION

*WHITE (2) BROWN (7/P2)-NEUTRAL
*YELLOW (4)-AC INPUT NEUTRAL

FIGURE 26

T8 — RED
T5 — BLACK
T2,T4 — YELLOW/WHITE
T1,T3 — NO CONNECTION

*BROWN/ORANGE-NEUTRAL
BLUE -AC INPUT NEUTRAL